


# Wood Side Panels: installation instructions

Thank you for your purchase of a set of custom wood side panels.

- 1** Unscrew chrome nuts on the sides of the original side panels x4
- 2** Use the 13 mm socket wrench to remove the brass nuts x4
- 3** Remove original side panels x2
- 4** Remove 3 small stainless steel screws on the back of the original side panels x2
- 5** Remove stainless steel side panel inserts x2
- 6** Replace stainless steel side panel inserts on wood panels and tighten the 3 stainless steel screws to secure x2
- 7** Install wood side panels and secure with brass nut followed by the chrome exterior nut x2

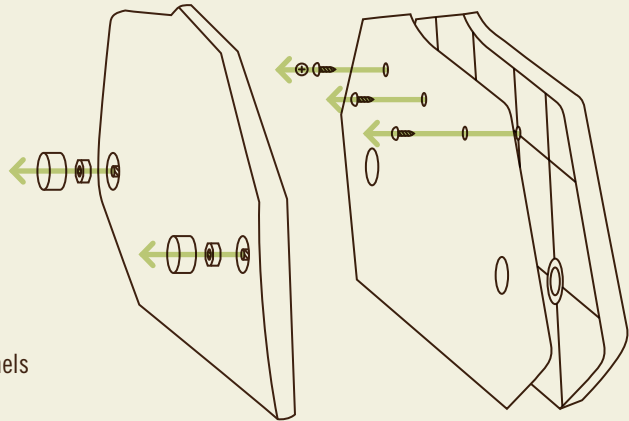

## Tools:

- 13 mm socket wrench
- Phillips screwdriver